

718 ESCORT

PORTABLE ZERO LLC
26045 Birch Bluff Road
Shorewood, MN 55331
Email: info@portablezero.com
www.portablezero.com

Assembly: Includes side panel A and B, 4 M5 x 14 mm machine screws, 4 m3 x 14mm machine screws, 8 self-adhesive rubber pads.


Step 1: On the **inside facing the radio** of both side panel A and B, Install 8 adhesive backed rubber pads as shown in the illustration below.. The pads with the hole get placed over the large mounting holes. The pads without the hole get placed in the lower center of the vertical section as shown. The location does not need to be exact.

Note: Side panel A and B are bent different. They need to be installed with the larger holes on top and the strap loops facing out.

Step 2: The Escort uses the bottom 2 cover bolt locations and upper 2 threaded holes as the as a mounting point. Remove all 4 lower cover screws and store them in a safe location. Place a M5 X 14mm screw in one of the 2 upper side panel holes and position the side panels against the radio aligning the holes in the side panel with the mounting holes in the radio and carefully thread the first screw part way in. Place the remaining 3 screws and thread them part way in. After all the screws are started, tighten them all up. **Only moderate tightening is necessary especially do not over tighten the small lower screws.**

Step 3: Install side panel B in the same manner.

**Install Pads As Shown Below. The lower pads do not need to be exact.
The upper pads get centered over the upper mounting holes**

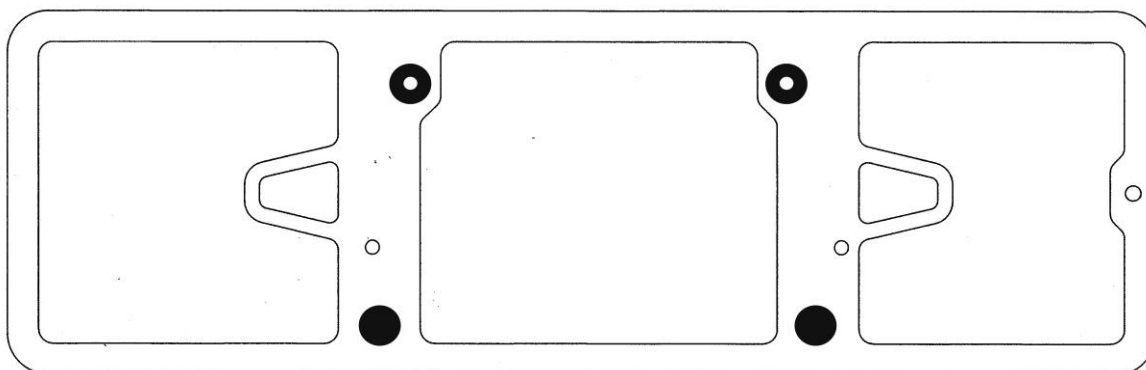

← Front of Escort