

7300 ESCORT

PORTABLE ZERO LLC
26045 Birch Bluff Road
Shorewood, MN 55331
Email: info@portablezero.com
www.portablezero.com

Assembly: Includes side panel A and B, 8 M4 x 14 mm Phillips machine screws, 8 self-adhesive rubber pads.

Step 1: On the inside facing the radio of both side panel A and B, Install 8 adhesive backed rubber pads centered over the mounting holes as shown below.


Note: Side panel A and B are identical so they can be installed on either side. The longer frame extension faces toward the front.

Step 2: Place a screw in one of the 4 side panel holes and position the side panels against the radio aligning the holes in the side panel with the mounting holes in the radio and carefully thread the first screw part way in.

Thread the remaining 3 screws loosely in place before doing the final tightening. **Caution: Do not over tighten the mounting screw. Just moderate tightening is required. The tapped holes in the radio can be stripped if overtightened.**

Step 3: Install side panel B in the same manner.

Step 3: Attach the carrying strap if included.

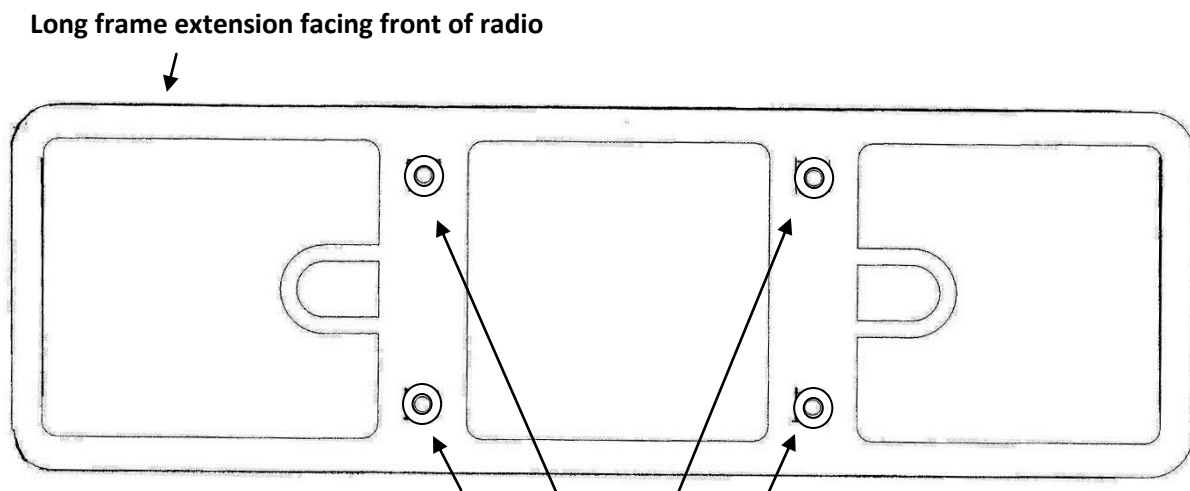

Install 4 self-adhesive rubber pads on the inside of each side panel